




Simple Cable - Triport Adapter

Setup Guide

This document describes the Simple Cable - Triport Adapter, which lets you connect up to three Simple Cable - Emitters or up to two Simple Cable - Emitters and one Simple Cable - Blaster to a Simple Blaster (Wi-Fi or Ethernet).

Important: Do **not** connect a Simple Cable - Complete, a Simple Cable - Triple Emitter, a Simple Cable - Relay, or a Simple Cable - Serial to a Simple Cable - Triport Adapter; **they will not work**.

The Simple Cable - Triport Adapter is available for [purchase from the Simple Control Store](#).

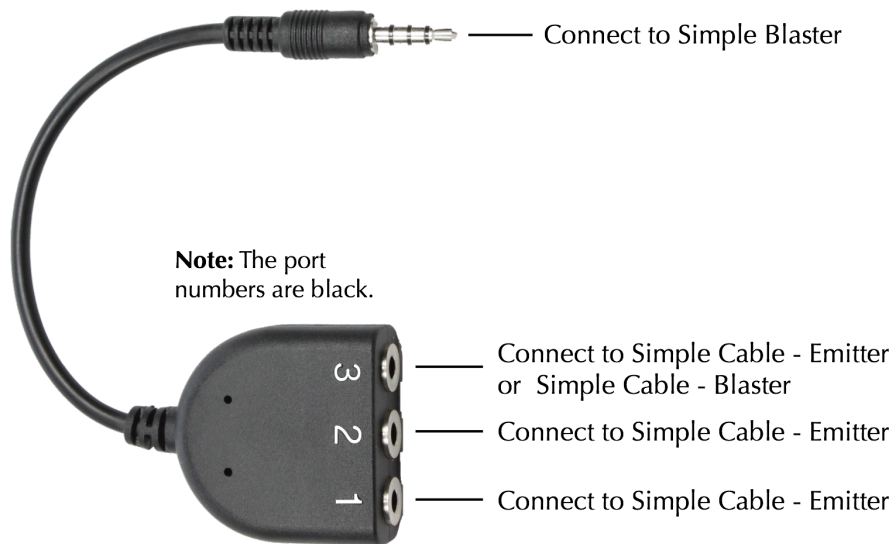

HARDWARE SETUP

The Simple Cable - Triport Adapter has a 3.5mm connector on one end that **must** attach directly to a Simple Blaster.

On the other end, the Simple Cable - Triport Adapter has three ports, labeled **1**, **2**, **3** in black letters:

- **Ports 1 and 2:** you can attach a Simple Cable - Emitter to either or both. *Do not attach a Simple Cable - Blaster to Port 1 or 2; it will not work correctly.* During software configuration, make sure to correctly match the port number and device. For example, if you are controlling a TV using a Simple Cable - Emitter attached to **Port 1** on the Simple Cable - Triport Adapter, make sure to choose **IR Port 1** during software configuration of the TV.
- **Port 3:** you can attach a Simple Cable - Emitter or a Simple Cable - Blaster. *This is the only port on the Simple Cable - Triport Adapter that supports a Simple Cable - Blaster.*

If you attach a Simple Cable - Blaster to **Port 3** and are controlling devices with the blaster, during software configuration you must configure all of these devices on **IR Port 3** and also configure the Simple Blaster to support a blaster (**Three IR Port Flex Link Cable** set to **Yes** and **Blaster** set to **Yes**).

Note: You can connect either the Simple Cable – 12' or – 25' Extension to any port on the Simple Cable - Triport Adapter to extend the reach of a Simple Cable - Emitter or a Simple Cable - Blaster. You can also connect the Simple Cable - Xantech Compatibility to any port on the Simple Cable - Triport Adapter; configure it as if it were an emitter cable.

SOFTWARE CONFIGURATION

To configure a Simple Cable - Triport Adapter:

1. Open the Simple Control app, edit a room, and tap **Add Device**.
2. On the **Add Device** screen, tap **Simple Blaster WiFi** or **Simple Blaster Ethernet**.
3. On the **Choose Port** screen, tap the appropriate port number.
 - If you are configuring a device controlled by a Simple Cable - Emitter, be sure to match the port number with the device you are configuring.
 - If you are configuring a device controlled by a Simple Cable - Blaster, choose **IR Port 3**. **All** devices controlled by a Simple Cable - Blaster **must** be configured on **IR Port 3**.
4. Finish configuring the device.
5. Return to the **Add Device** screen and make any necessary changes, then tap **Save**.

Follow **Steps 1** through **5** for devices being controlled via Simple Cable - Emitters. No other steps are necessary.
6. If you are controlling any devices with a Simple Cable - Blaster, continue to **Step 7**.
7. On the **Add Device** screen, tap **Simple Blaster Settings**.
8. On the page that loads, tap **Flex Link Cable**.
9. Select **Infrared** for the **Flex Link Cable Mode**.
10. Set **Three IR Port Flex Link Cable** to **Yes** and **Blaster** to **Yes**.

This is a global setting for the Simple Blaster; you only have to set it once for the Simple Blaster no matter how many devices are being controlled by the blaster.
11. Tap **Save Changes**, then return to the **Add Device** screen and tap **Save**.

TROUBLESHOOTING

- The Simple Cable - Triport Adapter **must** be directly connected to a Simple Blaster.
- Connect only single cable accessories (Simple Cable - Emitter, Simple Cable - Blaster, Simple Cable – 12' or 25' Extension, or Simple Cable - Xantech Compatibility) to the Simple Cable - Triport Adapter. Do **not** connect a Simple Cable - Complete, a Simple Cable – Triple Emitter, a Simple Cable – Relay, or a Simple Cable - Serial to the Simple Cable - Triport Adapter; **they will not work**.
- If you connect a Simple Cable - Blaster to a Simple Cable - Triport Adapter and are using it to control devices, the Simple Cable - Blaster **must** be physically connected to **Port 3** and the devices **must** be configured in software on **IR Port 3**. You must also configure the Simple Blaster to support a blaster: **Flex Link Cable Mode: Infrared, Three IR Port Flex Link Cable: Yes, Blaster: Yes**.